Open Enterprise Server 11 SP3 Novell Cluster Services Implementation Guide for VMware

July 2016



Legal Notice

For information about legal notices, trademarks, disclaimers, warranties, export and other use restrictions, U.S. Government rights, patent policy, and FIPS compliance, see https://www.novell.com/company/legal/.

Copyright © 2014 - 2016 Novell, Inc. All Rights Reserved.

Contents

About This Guide

1	Gett	ting Started with Novell Cluster Services in an ESXi Virtualized Environment	7
	1.1	Configuration Overview	8
	1.2	Understanding Virtualization	8
		1.2.1 Where Is Virtualization Today?	9
		1.2.2 Why Use Virtualization?	
		1.2.3 Why Use Novell Cluster Services?	
	4.0	1.2.4 Server versus Service Virtualization	
	1.3	Architectural Scenarios	
		1.3.1 Only Service Virtualization 1.3.2 Only Server Virtualization	
		1.3.2 Only Server Virtualization 1.3.3 NCS on Host Machines Managing Xen or KVM Guest Machines	
		1.3.4 NCS Managing Services on Guest Machines	
		1.3.5 NCS Managing Services on a Cluster of Physical and Guest Machines	
	1.4	Design and Architecture Considerations	
		1.4.1 Challenges of Server Virtualization	
		1.4.2 Cost of Server Virtualization	
		1.4.3 Challenges of Service Virtualization	15
		1.4.4 Cost of Service Virtualization	
		1.4.5 Fault Tolerance and Scalability	
		1.4.6 Planning Considerations	
		1.4.7Full Virtualization versus Paravirtualization1.4.8Comparing Architectures	
			10
2	Plan	nning for the Virtualized Environment	17
	2.1	Things to Explore	17
	2.2	Infrastructure Dependencies	
	2.3	LAN and SAN Connectivity	
	2.4	Time Recommendations	
	2.1	2.4.1 Time Source	
		2.4.2 UTC Time Format	
		2.4.3 Tolerance in a Virtualized Environment	
		2.4.4 Tolerance in a Stretch Cluster	
		2.4.5 Quorum and Quorum Timeout	
		2.4.6 Keep Latency in Mind	
	2.5	Recommendations	
	2.6	Upgrading VMware ESXi on the Host Server	
	2.7	Installing or Updating VMware Tools on Cluster Nodes	20
	2.8	Known Issues	20
3	Impl	lementing Novell Cluster Services in an ESXi Virtualized Environment	21
5	-	-	
	3.1	Supported Configurations	
		3.1.1 Physical Machines 3.1.2 Virtual Machines on a Single VMware Host	
		3.1.2 Virtual Machines from Different VMware Hosts	
		3.1.4 Mixtures or Subsets of All of the Above	
	3.2	Required Software	

5

Ilation Overview
ng Up Virtual Switches on the ESXi Host26
ng Up Dedicated NICs for a Virtual Machine26
ng Up a Time Server for a Virtual Machine
aring Shared Storage
ting a Virtual Machine
st Operating System Installation Sources55
r a

A Documentation Updates

_	7

A.1	March 2	2015 (OES 11 SP2)
A.2	January	2014 (OES 11 SP2)
	A.2.1	Implementing Novell Cluster Services in an ESXi Virtualized Environment
	A.2.2	Planning for the Virtualized Environment58

About This Guide

This guide describes how to use Novell Cluster Services in VMware virtual environments. The implementation guidelines include recommended settings and administrative processes to deploy and use Novell Cluster Services in virtual environments.

- Chapter 1, "Getting Started with Novell Cluster Services in an ESXi Virtualized Environment," on page 7
- Chapter 2, "Planning for the Virtualized Environment," on page 17
- Chapter 3, "Implementing Novell Cluster Services in an ESXi Virtualized Environment," on page 21
- Appendix A, "Documentation Updates," on page 57

Audience

This guide is intended for system administrators who are familiar with VMware technology and Novell Cluster Services. A basic understanding of VMware software and virtual environments is assumed.

Feedback

We want to hear your comments and suggestions about this manual and the other documentation included with this product. Please use the User Comments feature at the bottom of each page of the online documentation.

Documentation Updates

For the most recent version of the *Novell Cluster Services Implementation Guide for VMware*, visit the OES 11 SP3 documentation website (http://www.novell.com/documentation/oes11/).

Additional Documentation

For information about managing Novell Cluster Services clusters and resources, see the OES 11 SP3: Novell Cluster Services for Linux Administration Guide.

1 Getting Started with Novell Cluster Services in an ESXi Virtualized Environment

Novell Cluster Services (NCS) for Novell Open Enterprise Server (OES) 11 Support Pack (SP) 3 supports clustering virtual machines, physical machines, and a mixture of virtual and physical machines in the same cluster. Among other benefits, clustering virtual machines can help reduce the hardware costs of traditional clusters.


The ESXi 5.1 hypervisor, the latest virtualization software developed by VMware, allows multiple virtual machines on a single host. ESXi supports the latest processors from Intel and Advanced Micro Devices. The hypervisor abstracts the underlying bare-metal hardware, which allows you to define virtual machines with the virtual hardware needed by a guest operating system.

This guide describes how to get the most from Novell Cluster Services within an ESXi virtualized environment.

- Section 1.1, "Configuration Overview," on page 8
- Section 1.2, "Understanding Virtualization," on page 8
- Section 1.3, "Architectural Scenarios," on page 11
- Section 1.4, "Design and Architecture Considerations," on page 14

1.1 Configuration Overview

A typical Novell Cluster Services cluster (see Figure 1-1) consists of a number of machines that coordinate through computer networks to make resources highly available. Nodes in a cluster can be physical, virtual, or any combination of the two. The cluster resources often reside on shared storage.

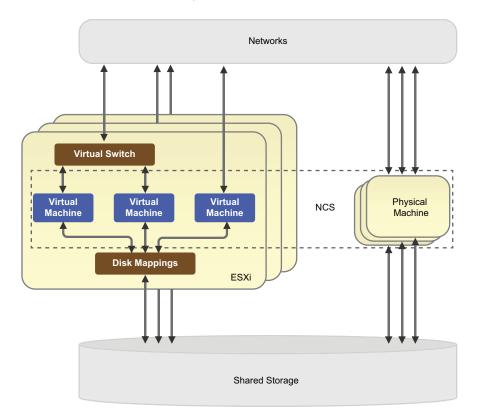



A typical ESXi host machine includes virtual network switches, disk mappings, and virtual machines. A virtual machine can access the network directly through PCI pass-through, or through virtual switches inside the ESXi host.

Just like other Linux systems, shared storage is presented in ESXi hosts as devices. Disk mapping provides a way for virtual machines to share those devices. Clustering of virtual machines normally requires the mappings of shared devices to be Raw Disk Mappings (RDM). The RDMs cannot reside on a datastore on shared devices, unless you have lower-level cluster software to manage the datastore.

From the NCS point of view, there is no difference between a virtual machine and a physical machine. You can cluster any combination of them. Although NCS supports clustering mixtures of physical machines and virtual machines, it is easier to manage clusters where all nodes have the same or similar capacity.

1.2 Understanding Virtualization

Virtualization can be used at multiple computing levels to provide services for your enterprise.

- Section 1.2.1, "Where Is Virtualization Today?," on page 9
- Section 1.2.2, "Why Use Virtualization?," on page 9

- Section 1.2.3, "Why Use Novell Cluster Services?," on page 9
- Section 1.2.4, "Server versus Service Virtualization," on page 9

1.2.1 Where Is Virtualization Today?

Virtualization of servers and services is everywhere:

- Virtualization with hardware, such as blade centers or Cisco Unified Computing System (UCS).
- Virtualization with software, such as VMware, XEN, KVM, Hyper-V, and more.
- Virtualization within the infrastructure:
 - Network: VLAN
 - SAN: port virtualization in the SAN
 - Storage virtualization

1.2.2 Why Use Virtualization?

The benefits of virtualization include the following:

- Allows consolidation of servers to help reduce costs for hardware and power.
- Allows independence of servers from hardware and environmental complexities and infrastructure.
- Allows scalability of services on a single server because the hardware is more powerful than one service needs.
- · Increases server and service availability.
- Allows you to use cloud services.
- Builds independence from hardware to gain the flexibility of managing hardware connectivity on only the virtualization level.

1.2.3 Why Use Novell Cluster Services?


The benefits of using Novell Cluster Services as your clustering solution include the following:

- · Increases service availability, minimizing recovery time when problems occur
- Consolidation
- Flexibility
- Scalability
- Manageability
- Hardware independence

1.2.4 Server versus Service Virtualization

Virtualization can occur on different levels in the computing environment. The difference between a server and a service is summarized in Table 1-1. A server consists of hardware, an operating system environment made up of the kernel and hardware drivers, one or more services, and a process


scheduler to control the services. A service consists of data and the service configuration settings, the application that provides the service (including its process, code, and executable), and a network address to give users access to the service.




Server with Operating System	Service		
Hardware	Data and configuration		
 Operating system (kernel, hardware drivers) 	 Application (process, code, executable) 		
One or more services	Network address		
Process scheduler			

In a virtualized environment, a server can be virtualized as a virtual machine that is independent of the hardware. Virtualization hypervisors such as Xen, KVM, VMware, and Hyper-V allow virtualization of servers.



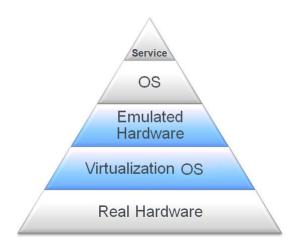

With Novell Cluster Services, a service can be virtualized as a cluster resource that can be failed over between nodes. Clustering makes the service independent of the hardware.

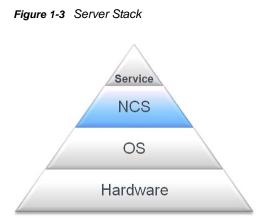

1.3 Architectural Scenarios

Typical architectural scenarios for virtualized environments are illustrated in this section. You can use server and service virtualization at different levels to achieve your networking goals.

- Section 1.3.1, "Only Service Virtualization," on page 11
- Section 1.3.2, "Only Server Virtualization," on page 12
- Section 1.3.3, "NCS on Host Machines Managing Xen or KVM Guest Machines," on page 12
- Section 1.3.4, "NCS Managing Services on Guest Machines," on page 13
- Section 1.3.5, "NCS Managing Services on a Cluster of Physical and Guest Machines," on page 13

1.3.1 Only Service Virtualization

Novell Cluster Services can be installed on physical machines. Services are virtualized as cluster resources that can fail over between physical machines in the same cluster.


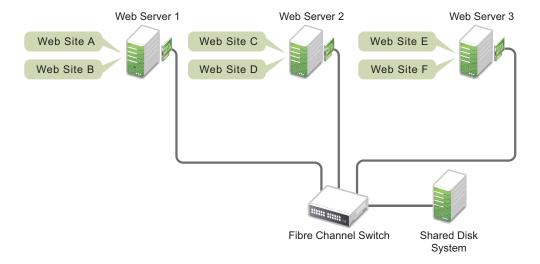


Figure 1-4 Service Resources on Physical Servers

1.3.2 Only Server Virtualization


Guest machines can be hosted on physical machines. No services are virtualized.

Figure 1-5 Guest Servers with No Clustering

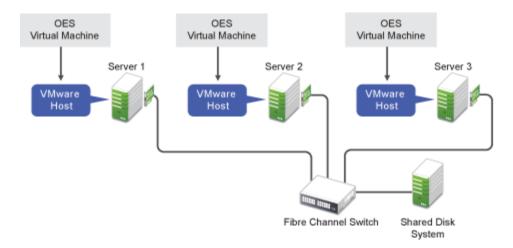

1.3.3 NCS on Host Machines Managing Xen or KVM Guest Machines

Novell Cluster Services can be installed on host machines. Virtual machines are virtualized as cluster resources that can be failed over between physical machines in the same cluster. Nodes in the cluster run the same virtualization software, such as Xen or KVM.

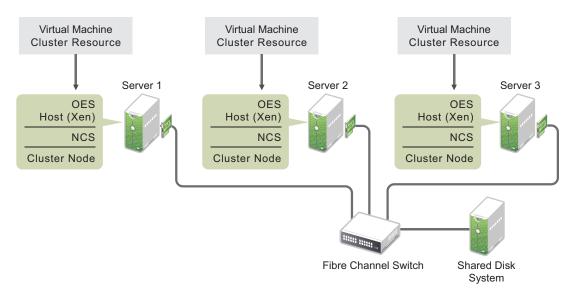



This scenario is covered in "Virtual Machines as Cluster Resources" in the OES 11 SP3: Novell Cluster Services for Linux Administration Guide.

1.3.4 NCS Managing Services on Guest Machines

Novell Cluster Services can be installed on guest machines. Services are virtualized as cluster resources that can fail over between virtual machines in the same cluster.


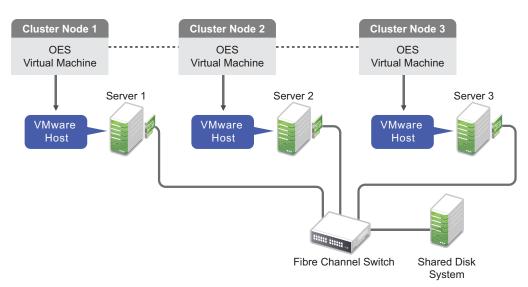


Figure 1-7 Guest Machines as Cluster Nodes

1.3.5 NCS Managing Services on a Cluster of Physical and Guest Machines

Novell Cluster Services can be installed on guest machines or physical machines. Any combination of physical machines and virtual machines that are running the same operating system can be in the same cluster. Services are virtualized as cluster resources that can fail over between the nodes in the same cluster.

Figure 1-8 Physical and Guest Machines as Nodes in a Cluster

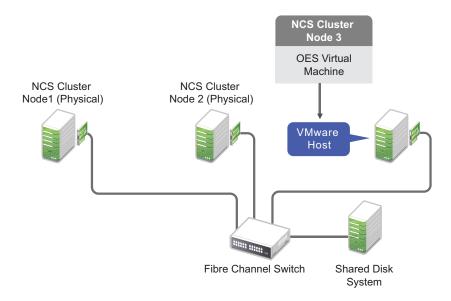

1.4 Design and Architecture Considerations

Before you deploy virtualized solutions, you should understand common architectures as well as the benefits, caveats, pros, and cons of virtualization for servers and services.

- Section 1.4.1, "Challenges of Server Virtualization," on page 14
- Section 1.4.2, "Cost of Server Virtualization," on page 14
- Section 1.4.3, "Challenges of Service Virtualization," on page 15
- Section 1.4.4, "Cost of Service Virtualization," on page 15
- Section 1.4.5, "Fault Tolerance and Scalability," on page 15
- Section 1.4.6, "Planning Considerations," on page 15
- Section 1.4.7, "Full Virtualization versus Paravirtualization," on page 15
- Section 1.4.8, "Comparing Architectures," on page 16

1.4.1 Challenges of Server Virtualization

- Server virtualization versus service virtualization
 - Operating system virtualization overhead
 - · Disk space used, memory, and CPU
 - Maintenance (install, configure, upgrade)
 - · Service virtualization has more dependencies
- · Multiple guests on the same host -- how to do quality of service
- Hardware monitoring--on which level
 - Hardware monitoring with NCS means a service restart (faster)
 - Hardware monitoring with a virtual machine host means a server restart, with a potentially higher risk of corruption for the virtual machine.
- Service monitoring--on which level
- Consolidation--on which level
- Resource migration--on which level

1.4.2 Cost of Server Virtualization

- Server virtualization has more overhead than service virtualization because of emulation of server hardware (main board, NIC, and HBA).
- Server virtualization has up to 80% performance loss when compared to native installation on hardware.
- · When do we realize the performance loss?
 - Only during high load I/O and not during normal work, such as GroupWise maintenance or database work.
 - During backup, restore, and data migration.
 - Whenever we have a high number of small I/O.
 - Because of the virtualization, higher latency and more CPU usage.

1.4.3 Challenges of Service Virtualization

- Same patch level for all services is required on one host.
- Dependencies exist between services on the same host.
- It is impossible to run the same service twice on the same server (isolation).
 - Processes are not designed to run twice on the same server.
 - Running multiple instances can cause networking conflicts (ports).

1.4.4 Cost of Service Virtualization

- Fewer physical servers and less hardware are required.
- Less maintenance for the physical server's OS is required.
- One service can cause a server or other services to crash.

1.4.5 Fault Tolerance and Scalability

- NCS is made to monitor hardware and to monitor services.
- VMware is made to monitor hardware and servers. Doing the same thing on multiple layers results in sub-optimal architecture.
- Creating multiple cluster nodes on the same virtualization host does not provide the same hardware fault tolerance as having the nodes on separate servers. However, if a guest server fails, you can fail over the resource to another guest server.
- Creating multiple clusters within a virtualization environment allows you to maximize the use of your hardware, but it does not provide the same hardware fault tolerance as having clusters running on separate servers.

1.4.6 Planning Considerations

- Performance
 - CPU and memory
 - Networks and storage
- Fault tolerance
 - No single point of failure outside the hosts
 - Resource fail-over matrixes can help assure that you have provided a fail-over environment for each resource
- Balancing workload
 - eDirectory servers

For information about configuring and managing eDirectory servers in your OES 11 SP3 environment, see the NetIQ eDirectory 8.8 SP8 documentation website (http://www.netiq.com/documentation/edir88).

The cluster master

1.4.7 Full Virtualization versus Paravirtualization

Paravirtualization drivers for NIC and SCSI

- Only SLES 11 / OES 11
- Manageability
- vMotion or virtual machine migration between hosts
- · Virtual disks versus raw disk mappings
- PCI pass-through

1.4.8 Comparing Architectures

- · 20 services need to run on 4 physical servers
 - Advantages and disadvantages of these solutions
 - Installation, configuration, and change management
- Just NCS hosting 20 resources
 - Does not have the overhead of a hardware virtualization layer
 - Has hardware and service dependencies
- Just a hypervisor hosting 20 virtual servers
 - Maintenance overhead
 - Virtualization overhead
- Hypervisor hosting 4 servers with NCS that has 20 resources
 - Advantages of both the NCS solution and hypervisor solution

The benefits of using both virtualization and NCS include:

- · Combines server and service virtualization in an intelligent way.
- Balances the number of servers with the number of services.
- Uses the same rules as NCS on physical environments.
- NCS allows you to run fewer virtual servers to provide the same services and allows daytime maintenance.

2

Planning for the Virtualized Environment

Use the information in this section as you plan a Novell Cluster Services cluster that uses virtual machines as nodes.

- Section 2.1, "Things to Explore," on page 17
- Section 2.2, "Infrastructure Dependencies," on page 17
- Section 2.3, "LAN and SAN Connectivity," on page 17
- Section 2.4, "Time Recommendations," on page 18
- Section 2.5, "Recommendations," on page 19
- Section 2.6, "Upgrading VMware ESXi on the Host Server," on page 19
- Section 2.7, "Installing or Updating VMware Tools on Cluster Nodes," on page 20
- Section 2.8, "Known Issues," on page 20

2.1 Things to Explore

- VLANs (virtual LANs) allow you to balance performance and fault tolerance.
- Automated installation
 - Saves time
 - Avoids errors
 - License key
 - Device names
 - Host keys

2.2 Infrastructure Dependencies

- Name resolution is controlled outside of the virtualization.
- Time synchronization is controlled outside of the virtualization.
 - Ensure that the host's time is synchronized.
 - Follow the virtualization vendor's time synchronization recommendation documents.

2.3 LAN and SAN Connectivity

- Use physical device mappings of the NIC and HBA.
- And/or use paravirtualization where possible.
 - Install VMware tools.
 - Switch to paravirtualization drivers.

2.4 Time Recommendations

- Section 2.4.1, "Time Source," on page 18
- Section 2.4.2, "UTC Time Format," on page 18
- Section 2.4.3, "Tolerance in a Virtualized Environment," on page 18
- Section 2.4.4, "Tolerance in a Stretch Cluster," on page 18
- Section 2.4.5, "Quorum and Quorum Timeout," on page 18
- Section 2.4.6, "Keep Latency in Mind," on page 19

2.4.1 Time Source

The NCS cluster master node uses its server time to record most log entries. To synchronize time for all nodes, you should always use a time source that is external to the cluster. In a virtualized environment, the time source must also be external to host servers because the hypervisor provides virtual clocks to the guest servers. Using a time source that is external to cluster nodes and host servers allows time to be recorded consistently for cluster events.

2.4.2 UTC Time Format

UTC (Coordinated Universal Time) is the standard international time. All time zones are defined as an offset of UTC. UTC does not get adjusted for daylight savings. Use UTC time format instead of local time format on all cluster nodes. In a virtualized environment, ensure that you use UTC time format on the host servers and guests servers.

2.4.3 Tolerance in a Virtualized Environment

The cluster tolerance setting specifies the amount of time the master node gives all other nodes in the cluster to signal that they are alive. In a virtualized environment, a guest server communicates through the hypervisor to the network adapter, which can introduce some latency in communications. If the delay causes problems for the cluster node, you can increase the tolerance from 8 seconds (the default) to 12 seconds. The revised tolerance setting applies to all nodes. If the problem continues, try increasing the tolerance another 4 seconds to 16 seconds.

2.4.4 Tolerance in a Stretch Cluster

The cluster tolerance setting specifies the amount of time the master node gives all other nodes in the cluster to signal that they are alive. In a stretch cluster where nodes are not co-located, the distance between nodes can introduce some latency in communications. If the delay causes nodes to not meet the tolerance settings for the keep-alive signals, you can increase the tolerance for the cluster. Try increasing the tolerance from 8 seconds to 12 seconds. If more time is needed, increase the tolerance another 4 seconds to 16 seconds. Try incremental increases until the time allowed is sufficient under normal network conditions. The revised tolerance setting applies to all nodes.

2.4.5 Quorum and Quorum Timeout

Quorum and Quorum Timeout

2.4.6 Keep Latency in Mind

Keep latency in mind.

2.5 Recommendations

- Use NCS for scalability.
- Use NCS for service monitoring and service availability.
- Use NCS for maintenance.
- Use multipathing on the host.
- Use LAN fault tolerance on the host.
- Do not use vMotion for cluster nodes.

IMPORTANT: If you use vMotion on guest machine that is used as a cluster node, you must issue a cluster leave command in the guest environment before the vMotion migration is performed in the host environment.

- Increase tolerance by setting up hardware monitoring to be done by the host.
- Back up the guest machine with the vm API. Include memory in the backup and keep in mind the restore process. For consistency, use the single file restore.
- No back up to SAN within virtualized environments.
- Do not create templates or clones of servers that have eDirectory installed.
- Do not use snapshots of the host.

IMPORTANT: If you use a host snapshot, ensure that you fix eDirectory when you go back to a specific snapshot.

• Do not mix physical and virtual cluster nodes.

Physical and virtual cluster nodes will have different response times and performance characteristics. It is preferred to have consistency of hardware or guest environments for nodes in the same cluster.

• Do not run multiple NCS nodes on the same virtualization host.

The server hardware represents a single point of failure for all virtual machines running on the same virtualization host.

- All nodes require the same view to LAN and storage.
- No I/O caching to the SBD.
- Add multiple CPUs and enough memory.

2.6 Upgrading VMware ESXi on the Host Server

Before you upgrade VMware ESXi on a host server, you must first shut down all guest servers. A clustered guest server on the host is not available to its NCS cluster during the host upgrade process. The node will rejoin the cluster when it is rebooted after the host upgrade.

2.7 Installing or Updating VMware Tools on Cluster Nodes

Installing or updating VMware tools on a clustered guest server might cause brief interruptions to vital system services and indicators that are closely watched by NCS. As a result, the guest server might be fenced during the process. To avoid such problems, you must stop NCS on a node before you install or update VMware tools on it. You can start NCS on the node after you have successfully installed or updated VMware tools.

Alternatively, you can put the whole cluster in maintenance mode before you install or update VMware tools on the clustered guest servers, and disable maintenance mode afterwards. However, if something goes wrong with VMware tools update or installation, the cluster might be left in a unknown state, and you might need to reboot some nodes in order to bring the cluster out of maintenance mode.

2.8 Known Issues

 NIC status is insulated by virtual switches. For faster responses, use dedicated NICs for the virtual machine.

In VMware, a dedicated NIC is one that is presented exclusively to one guest operating system through pass-through PCI/PCIe. The number of dedicated NICs cannot exceed the number of NICs the physical box has.

- VMware presents NICs as pass-through PCI/PCIe. The virtual machine does not work directly with the NIC.
- Different NIC orders can occur with pass-through PCI/PCIe.
- Delay in reporting SAN errors.
- Deletion of RDM. You must delete virtual machines manually.

3 Implementing Novell Cluster Services in an ESXi Virtualized Environment

This section describes how to configure virtual machines on an ESXi hypervisor to maximize their performance when used with Novell Cluster Services for Novell Open Enterprise Server (OES) 11 SP3.

- Section 3.1, "Supported Configurations," on page 21
- Section 3.2, "Required Software," on page 25
- Section 3.3, "Installation Overview," on page 25
- Section 3.4, "Setting Up Virtual Switches on the ESXi Host," on page 26
- Section 3.5, "Setting Up Dedicated NICs for a Virtual Machine," on page 26
- Section 3.6, "Setting Up a Time Server for a Virtual Machine," on page 27
- Section 3.7, "Preparing Shared Storage," on page 28
- Section 3.8, "Creating a Virtual Machine," on page 30
- Section 3.9, "Guest Operating System Installation Sources," on page 55

3.1 Supported Configurations


A typical Novell Cluster Services cluster consists of a number of machines that coordinate through computer networks to make resources highly available. Machines can be physical, virtual nodes on a single VMware host, virtual nodes on different VMware hosts, or any combination of those.


This section illustrates the supported configurations. These examples are not intended to be limiting or an exhaustive representation of all possible combinations.

- Section 3.1.1, "Physical Machines," on page 22
- Section 3.1.2, "Virtual Machines on a Single VMware Host," on page 22
- Section 3.1.3, "Virtual Machines from Different VMware Hosts," on page 23
- Section 3.1.4, "Mixtures or Subsets of All of the Above," on page 23

3.1.1 Physical Machines

In Figure 3-1, the NCS cluster nodes are all physical machines. The websites are cluster resources on shared disks that can fail over between the physical nodes. All nodes are running the same version of the OES operating system.




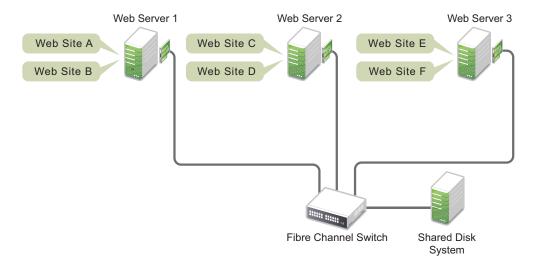

3.1.2 Virtual Machines on a Single VMware Host

In Figure 3-2, the NCS cluster nodes are all virtual machines. Each node is hosted on the same VMware host. All nodes are running the same version of the OES operating system.

Figure 3-2 NCS Cluster with Virtual Nodes from a Single VMware Host

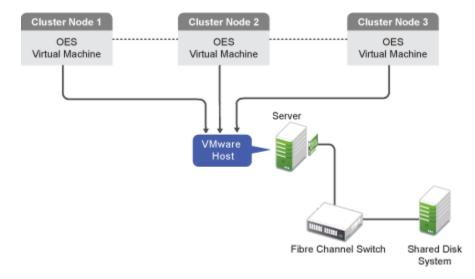

3.1.3 Virtual Machines from Different VMware Hosts

In Figure 3-3, the NCS cluster nodes are all virtual machines. Each node is hosted on a different VMware host. All nodes are running the same version of the OES operating system.


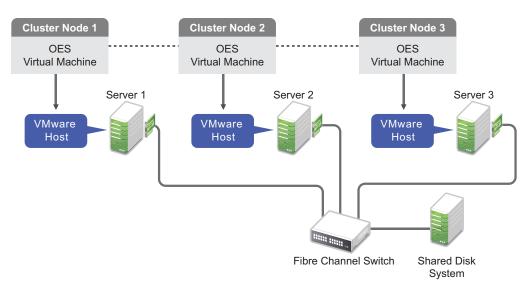


Figure 3-3 NCS Cluster with Virtual Nodes from Different VMware Hosts

3.1.4 Mixtures or Subsets of All of the Above

In Figure 3-4, the NCS cluster combines physical nodes with a virtual node from a VMware host. All nodes are running the same version of the OES operating system.

Figure 3-4 NCS Cluster with Physical Nodes and a Virtual Node

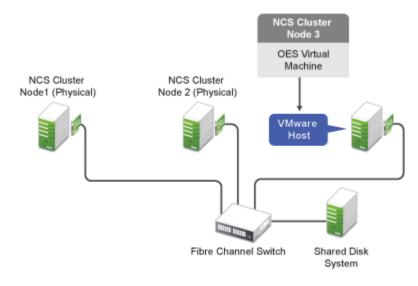

In Figure 3-5, nodes from multiple clusters reside on the same VMware host. Multiple two-node clusters are formed by combining a virtual node from one VMware host with a virtual node from a different VMware host. All nodes in the same cluster are running the same version of the OES operating system.


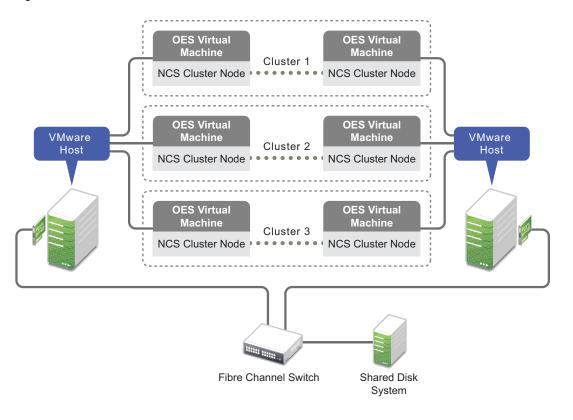


Figure 3-5 NCS Two-Node Clusters with Virtual Nodes from Different VMware Hosts

In Figure 3-6, nodes from multiple clusters reside on the same VMware host. Multiple two-node clusters are formed by combining a physical node with a virtual node from the VMware host. All nodes are running the same version of the OES operating system.

Figure 3-6 NCS Two-Node Clusters with Each Physical Node Paired a Different Virtual Node from a Single Virtual Host

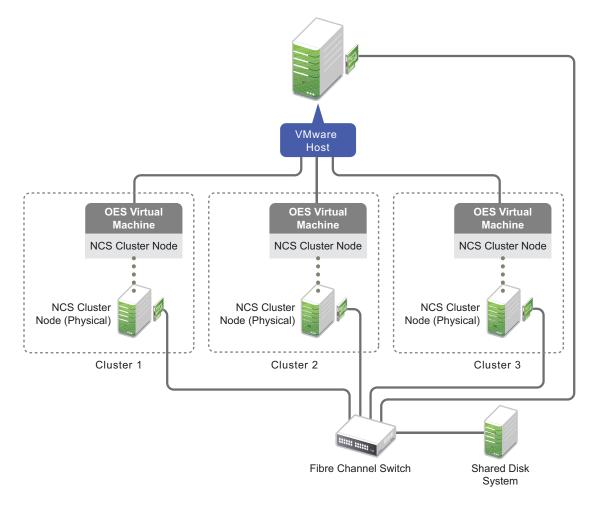

3.2 Required Software

The implementation described in this guide requires the following software to create the virtual machines:

- VMware ESXi, including SAN and LAN driver software
- VMware vSphere client


3.3 Installation Overview


To set up your virtualized environment:

- 1 Install the ESXi hosts, including the SAN and LAN driver software.
- 2 Configure the networks.

- 3 Prepare the SAN.
 - 3a Set up two disks that you will use for the split-brain detector (SBD) for the cluster.This allows you to mirror the SBD for cluster fault tolerance.
 - 3b Set up the shared storage and allocate the disks to the ESXi host.
- 4 Create 64-bit virtual machines.
- 5 Install OES on the virtual machines.
- 6 Configure Novell Cluster Services to create a cluster on the first node, then on the other nodes to add them to the cluster.

3.4 Setting Up Virtual Switches on the ESXi Host



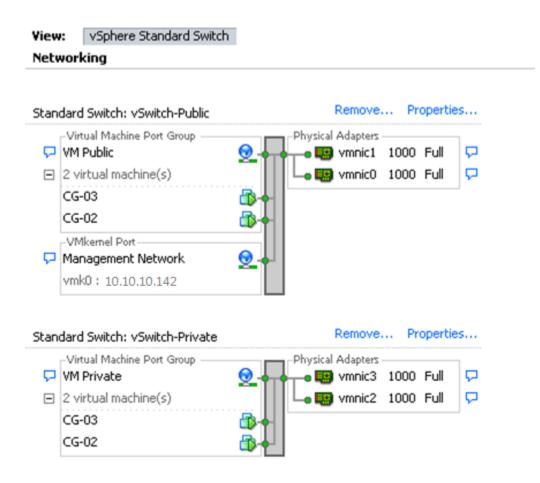

3.5 Setting Up Dedicated NICs for a Virtual Machine

Mark the NICS as VMDirectPath I/O pass-through devices on the host:

- 1 Select an ESX\ESXi host from the Inventory of VMware vSphere Client.
- 2 In the Configuration tab, click Advanced Settings. The passthrough Configuration page lists all available pass-through devices, as shown in the picture.

Figure 3-8 Dedicated NIC Example

	thines Resource Allocation Performance Configuration Local Users & Groups Events
lardware	DirectPath I/O Configuration
Health Status	Warning: Configuring host hardware without special virtualization features for virtual machine passthrough will make it unavailable for use except via dedicating it to a single
Processors	virtual machine. In particular, configuring a device needed for normal host boot or
Memory	operation can make normal host boot impossible and may require significant effort to
Storage	Each listed device is available for direct access by the virtual machines on this host.
Networking	Hide Details Refresh Edit
Storage Adapters	
Network Adapters	04:00.0 Broadcom Corporation Broadcom NetXtreme II BCM5709 1000Base-T
 Advanced Settings 	1000Base-T 04:00.1 Broadcom Corporation Broadcom NetXtreme II BCM5709 1000Base-T
Power Management	
ioftware	
Licensed Features	
Time Configuration	
DNS and Routing	
Authentication Services	
Virtual Machine Startup/Shutdown	
Virtual Machine Swapfile Location	
Security Profile	
Host Cache Configuration	
System Resource Allocation	

If the NICs are not listed, you need to click Edit, select the NICs and click OK.

When the NICs are selected, they are marked with an orange icon. Reboot for the change to take effect. After rebooting, the NICs are marked with a green icon and are enabled to be used as dedicated NICs.

Assign the NICs to VMs:

- 1 From the Inventory in vSphere Client, right-click the virtual machine and click Edit Settings.
- 2 Click the Hardware tab.
- 3 Click Add.
- 4 Choose the NICs.
- 5 Click Next.

3.6 Setting Up a Time Server for a Virtual Machine

To make a VM refer to single Time server:

- 1 In the vSphere client, click the Configuration tab.
- 2 In the left navigation under Software, click Time Configuration.
- 3 Select Properties > Options.
- 4 Click Add, specify the IP address of the time server, then click OK.

3.7 Preparing Shared Storage

- 1 Ensure that your shared disks are visible to the VMware hosts. You can use the vSphere Client or the command line interface.
 - vSphere Client: In the vSphere client, go to Host > Configuration > Storage > Devices.

For example, Figure 3-9 shows an example list of devices as viewed from the vSphere client:

Figure 3-9 List of Shared Devices on the ESXi Host as Viewed in the VSphere Client

	y Administration Bug-ins Help				
	brandery + 10 brandery				
8 8					
8 10 10 10 142	CLOSE ALTERNATION AND ALTERNATION	Seare 1986, S.J.A. 199723 Martin Theorem Managers, Conference, Constant & Street, The	and Thermore		
	Hardware	Yes Intation Denne	and the second		
	People Status	Designs			Salvesh Restand
	Province of	New	1 Martifue	Autoritary Operatory	and the second se
	Hereny	DGC Plane (Dannel Dak (nas 60060360bethi 16006e)+F#9508194(11)	was included to the test included in a many shares	white CO TO LOD Harried	20 1
	+ Strept	DGC Plane Channel Stat. Inex 400401048645110110110110110464010462111	nam 000001000b0001000000104540000144211	witholico.milli Havini	14
	Texture Ling	DOC Files Channel Dek (here 0006/05/06/06/16/16/01/06/07/10	nas 4000000000000000000000000000000000000	withs2(0)7013 Housing	3
	This age Adapters	OUCHER Channelink (nas.0008100bete (etclost?*(83110etCl))	The administrative intrined Page 11 (add)	HERACOLTULI Hautat	11
	National Adapters Advanced Settings	DGC Place (Darren/Dak (Heal 60060360645616011041605201184-011)	Nex. 40000318/86/5614011040/00/301146/11	webscottout Housed	
	Provide Markagement	DGC Fibre Channel Date Insue 60060360860614023228/960001362110	nas-800001488665136113228796000168211	mP842-00/10117 Houried	1.7
		DGCPBre Channel Dak (nas.4004034/bet%14013x25/7622144211)	naa.40000100865614013420/5452164211	writes2-col/touz Hounted	1
	Sufficient	DGCPBee Channel Dak (nex.00000300bf911601440942925254c012)	148-00001008050301401440342902034011	-mPile2-00/7014 Hourted	
	Lawrend Products	DGC Pilve Charrent Dell (mas 60060300bit%Likiti 4a0u39001114s211)	nas-60000108/b65628014a0x89d3118eC0	-mitia2-00/7011 Houried	1
	The Configuration	DGCPBre (harrel Ibili (has 0000100085618136134dHadi 00186213)	naa.000011000011014d044ad012104011	webbalcontolis Hounted	10
	DAD and Routing	DGCPRex ChannelDak (new 00000100865616075e9623075016e210)	nex.0000310866511015e9623210336233	writes-co.tout. Housed	8
	Authorite atom Services	DGC Plane Channel Dek (new 00060100bitte 19838408PSb/323.de211)	nex-600031608e561401460978F321(ec20)	writes2-C0-701,16 Hounted	34
	What Machine Startus/Deatlows What Machine SwepTile Location	DGC Hore Channel Dak (New A0060160bH010010004962132546211)	naa.600603608656160180aA067132106211	writes100:101.05 Hunted	15
	Security Profile	DGC/New Chareel Disk (new 00000100bith(1001%eR0%df0(11dx211)	nax.000601608666186019409680111044111	veltes2:00:70.0P Hauted	
	Head Cashe Configeration	DGC Fibre Channel/Del (Nes 60060160bif61801aa803906203bc211)	Nex-4006034d8#5614601ae0195063533e213	webs2100.1017 Housed	7
	distant Resource Mounters	DGC Files Charael Dak (has 00003100e56180180496390314e210)	nee-920921828456180145e395393334c211	webs2-co.to.Ltz Housted	12
	Agent of Settings	DUC Filme Charanel Disk (has 60060160bit56160168/9522602146211)	nee-60060163845614014614647522432146211	white: C0.70.13 Housted	10
	Advanced Settings	DGC FBre Chareer/Del (nas.6006016086561601abult/H030166211)	144.60001636661613014:40174012184211	white:compare Housed	*
	and the second sec	Disc Filme Channel Disk (max.60060060b15k11k11.dedF0855311.de211)	144 6006215/B65L1621dedF0P95231de213	vehila2-00:9018 Hounted	
		DSC Fibre Channel Stell (nex. 60061363b4581363)+628548331466211)	naa.dolooloobababaaanaachabaaaaaa	wines2-co.10118 Houted	18
		DGC PBre Channel Skik (has 60060160bt/liststs/kalb6627e3/k211)	nas konktakteristen Nafakizheter:	implacico.to.11 Houted	19
		HF Serial Attached SCSI Date (max.60050861001/031eithef95325687567)	1444 0007098-1001-910-eth-P973276-627327	white: co.to.ci Monted	1
		Local IDAC CD-ROM press website CD-TGLUB	ngu	-Hunted	
		4 (
		Device Details			Harage Falls.
		DGC Piller Channell Dell (ann. M0001) D: No. 6 Location: /ord/old-remobilizing/san All/All/Schitt D: No. 6 Type: del Capacity: 1,00 Owner: MMIN Capacity: 1,00 Owner: MMIN Factor Faculty: 100	sackato kalenda kato bashti Mastro Laketto (198		
		Faangert Pipe Channel			
ent Tasks	A constant		16	ene, Taget or Status contains: +	Des
	Target	Statue Cellals Setated by Respected Start	Tee - Sat Tee	Completed Time	

• Command Line Interface: As the root user, launch a terminal console, then enter

ls -lSh /vmfs/devices/disks/* | grep -v '^l\|:[0-9]\+\$'

For example, Figure 3-10 shows the example output from this command:

Figure 3-10 List of Shared Devices on the ESXi Host as Viewed in the ESXi Shell

1 rootRCG-	ESX1-02:- 1	1s -13h	/vmfs/devices/d	isks/*	grep -v '^1/1:[0-9]/+\$'	
£8	1 root	root	512.00 Jan		/wmfs/devices/disks/naa.60060160b6561601dedf0855331de211	
r.u	1 root	root	256.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601d0ad9639331de211	
r.u	1 root	root	232.96 Jan	7 22:20	/vmfs/devices/disks/naa.600508b1001c931e65ef8f337b6d71b7	
r u	1 root	root	128.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616015e9b2327331de211	
ru	1 root	root	17.06 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616006eb4fd35881fe211	
X U	1 root	root	16.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601f6a5b6627e1fe211	
TU	1 root	root	15.06 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601e028c9db321de211	
T.R	1 root	root	14.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616016836f5bf321de211	
TU	1 root	root	13.0G Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616014ab44aab321de211	
T. H	1 root	root	12.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616014a034292321de211	
T U	1 root	root	11.0G Jan	7 22:20	/vmfs/devices/disks/naa.60060160b656160180a9d671321de211	
- <u>r</u> w	1 root	root	10.06 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616013c20c75d321de211	
.r.u	1 root	root	9.06 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601dce01f40321de211	
<u>r</u> u	1 root	root	8.05 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601da7f522a321de211	
T.R	1 root	root	7.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616014a0a3ffd311de211	
<u>т</u> и	1 root	root	6.05 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616019a40f6d8311de211	
τυ	1 root	root	5.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616010ce074c6311de211	
-T.R	1 root	root	4.06 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b656160110418353311de211	
T W	1 root	root	3.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601aa815506311de211	
T.R	1 root	root	2.0G Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601061045eb301de211	
T W	1 root	root	1.00 Jan	7 22:20	/vmfs/devices/disks/naa.60060160b65616010aba1ec32b1de211	
.r.u	1 root	root	1.0G Jan	7 22:20	/vmfs/devices/disks/naa.60060160b6561601322b3960301de211	

2 For each disk that you want to use with the virtual machines, create a virtual compatible Raw Disk Mapping (RDM). Store the RDMs outside of the virtual machines.

It is faster to use the command line when mapping the devices. If you use the vSphere Client, you must create the RDMs when you add the first virtual machine on each host. Using the client is time-consuming and error-prone.

If your virtual machines reside on multiple hosts, you can generate a script to perform the preceding steps on one host, then run it on all the hosts.

2a Create the location where you will store the RDMs. At a command prompt, enter

mkdir -p /vmfs/volumes/<datastore name>/sharedDisks

Replace *datastore* name with the name of the datastore you are creating.

For example, enter

mkdir -p /vmfs/volumes/datastore1/sharedDisks

2b Map each disk to the RDM location. At a command prompt, enter the following command for each disk:

vmkfstools -r <disk_name> <RDM_location>

For example, enter

vmkfstools -r /vmfs/devices/disks/naa.60060160b6561601dedf0855331de211 /vmfs/volumes/ datastore1/sharedDisks/VM-SAN-512G-NSS.vmdk

Figure 3-11 Commands to Map Disks to the RDM Location

tdir -p /vmfs/volumes/datastore1/sh		the sectory of the sector s
		/vmfs/volumes/datastore1/sharedDisks/VM-SAN-512G-NSS.vmdk
		/vmfs/volumes/datastore1/sharedDisks/VM-SAN-256G-NSS.vmdk
		/vmfs/volumes/datastore1/sharedDisks/VM-SAN-128G-NSS.vmdk
		/vmfs/volumes/datastore1/sharedDisks/VM-SAN-001G-SBD-A.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601322b3960301de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-001G-SBD-B.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601061045eb301de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-002G-EVMS.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601aa815506311de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-003G-EVMS.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b656160110418353311de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-004G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616010ce074c6311de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-005G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616019a40f6d8311de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-006G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616014a0a3ffd311de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-007G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601da7f522a321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-008G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601dce01f40321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-009G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616013c20c75d321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-010G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b656160180a9d671321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-011G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616014a034292321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-012G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616014ab44aab321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-013G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b65616016836f5bf321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-014G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601e028c9db321de211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-015G-LVM.vmdk
nkfstools -r /vmfs/devices/disks/na	a.60060160b6561601f6a5b6627e1fe211	/vmfs/volumes/datastore1/sharedDisks/VM-SAN-016G-LVM.vmdk
		/vmfs/volumes/datastore1/sharedDisks/VM-SAN-017G-LVM.vmdk

2c Repeat this process for each virtual node in the cluster.

3 Eager-zero the SBD devices. At a command prompt, enter

vmkfstools -k sbd rdm

Eager-zero writes zeroes to all allocated blocks on the device. This allocates all required space for the virtual disk at this time. It might take several minutes to zero-out the devices.

3.8 Creating a Virtual Machine

As you create the virtual machine by using the vSphere Client, many settings will use the default value. Ensure that you use the following recommended settings:

 For the iSCSI controller, use LSI Logic SAS (the default controller type for SUSE Linux Enterprise Server 11 64-bit).

NOTE: VMware Paravirtual SCSI controllers cannot be used in clustering environments because they use caches to achieve better throughput.

Add virtual NICs if needed.

You can specify whatever NIC type you need based on your hardware, network needs, and other considerations for your environment.

For example, E1000 and VMXNET3 NIC types have drivers in the Linux kernel and do not require VMware Tools to be installed in order to run. This allows these NICs to be available during the operating system installation.

- Edit the VM settings before you complete the virtual machine creation.
 - Add the shared storage.
 - Change the MAC address setting to Manual.
 - Remove unwanted hardware, such as the floppy disk.
 - Add dedicated NICs.

Ensure that you meet the prerequisites for creating virtual machines, as described in "Start the Virtual Machine Creation Process in the vSphere Client" (http://pubs.vmware.com/vsphere-50/ index.jsp?topic=%2Fcom.vmware.vsphere.vm_admin.doc_50%2FGUID-4C0F4D73-82F2-4B81-8AA7-1DD752A8A5AC.html) in the VMware vSphere 5 Documentation Center.

- 1 Launch the vSphere Client.
- 2 In the vSphere Client, display the inventory objects in the vSphere Client by using the VM and Templates view.
- 3 Right-click an object and select New > Virtual Machine.
- 4 On the Configuration page, select Custom, then click Next.

Figure 3-12 Create New VM: Configuration - Custom

Create New Virtual Ma Configuration Select the configuration for	
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Configuration C Typical Create a new virtual machine with the most common devices and configuration options. C Custom Create a virtual machine with additional devices or specific configuration options.
Help	≤ Back Next ≥ Cancel

5 On the Name and Location page, select a name and location for the virtual machine, then click Next.

The name you enter is used as the virtual machine's base name in the inventory and for the name of the virtual machine's files. The name must be unique on the host server. Names are case insensitive and can be up to 80 characters long.

🖉 Create New Virtual Ma	chine
Name and Location Specify a name and location	n for this virtual machine
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Name: [MyVM001] Virtual machine (VM) names may contain up to 80 characters and they must be unique within each vCenter Server VM folder. VM folders are not viewable when connected directly to a host. To view VM folders and specify a location for this VM, connect to the vCenter Server.
Help	≤ Back Next ≥ Cancel

6 On the Storage page, select a destination datastore for the virtual machine files, then click Next. For this example, select datastore1.

Figure 3-14 Create New VM: Storage

Create New Virtual Mac	hine							
Storage Select a destination storage for the virtual machine files								
Configuration	Select a destination storage for the virtual machine files:							
Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Name	Drive Type	Capacity	Provisioned	Free	Туре	Thin Pro	
	🔋 datastore1	Non-SSD	227.75 GB	97.65 GB	130.70 GB	VMFSS	Support	
			m					
	Disable Storage DRS for this virtual machine Select a datastore:							
	Name	Drive Type	Capacity Pr	rovisioned	Free	Туре	Thin Prov	
	<		111				,	
Help				≤Back	Next 2		Cancel	

7 On the Virtual Machine Version page, specify the compatibility version desired for the virtual machine image, then click Next.

If the host supports more than one VMware virtual machine version, you can select a version for the virtual machine.

Figure 3-15 Create New VM: VM Version

🖉 Create New Virtual Mac	thine
Virtual Machine Version	
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Virtual Machine Version This host or cluster supports more than one VMware virtual machine version. Specify the virtual machine version to use. Virtual Machine Version: 4 This version will run on VMware ESX 3.0 and later, and VMware Server 1.0 and later. This version is recommended when sharing storage or virtual machines with ESX up to 3.5. Virtual Machine Version: 7 This version will run on VMware ESX/ESXI 4.0 and later. This version is recommended when sharing storage or virtual machines with ESX/ESXI up to 4.1. Virtual Machine Version: 8 This version will run on VMware ESXI 5.0 and later. Choose this version if you need the latest virtual machine features and do not need to migrate to ESX/ESXI 4.
Help	_≤ Back Next ≥ Cancel

8 Specify the guest operating system and version to use with this virtual machine, then click Next.


For the OES Server, select Linux as the Guest Operating System, then select SUSE Linux Enterprise Server 11 64-bit from the Version drop-down list.

Figure 3-16 Create New VM: Guest Operating System

Create New Virtual Ma	chine 🗖 🗖 🗾 🔁
Guest Operating System Specify the guest operatin	Virtual Machine Version: 8 g system to use with this virtual machine
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Guest Operating System:
Help	Back Next ≥ Cancel

9 On the CPUs page, select the number of virtual sockets for the virtual machine, select the number of cores per virtual socket, then click Next.

The total number of cores is the number of cores per socket multiplied by the number of virtual sockets. The resulting total number of cores should be a number equal to or less than the number of logical CPUs on the host.



🕑 Create New Virtual Ma	chine		
CPUs Select the number of virtu	al CPUs for the virtual machine.		Virtual Machine Version: 8
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Number of virtual sockets: Number of cores per virtual socket: Total number of cores: The number of virtual CPUs that you depends on the number of CPUs on the number of CPUs supported by the gu The virtual CPU configuration specifie might violate the license of the guest Click Help for information on the num processors supported for various gu systems.	the host and the Jest OS. ed on this page : OS. ber of	
		≤Back	Next ≥ Cancel

10 On the Memory page, specify the amount of memory that the guest operating system can use, then click **Next**.

The minimum memory size is based on the type of firmware used by the virtual machine:

- BIOS firmware: 4 MB
- EFI firmware: 96 MB

The maximum memory size for a virtual machine depends on the host's physical memory and the virtual machine's hardware version. The size must be a multiple of 4 MB.

Figure 3-18 Create New VM: Memory

🖉 Create New Virtual Ma	chine		
Memory Configure the virtual mach	ine's memory size.		Virtual Machine Version: 8
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	512 GB - 256 GB - 128 GB - 32 GB - 16 GB - 4 GB - 2 GB - 1 GB - 2 GB - 1 GB - 2 GB - 1 GB - 2 GB - 1 GB - 3 2 GB - 3 1 GB -	Ation Memory Size: 4 GB Maximum recommended for this Maximum recommended for best performance: 12276 MB Default recommended for this guest OS: 1 GB. Minimum recommended for this guest OS: 512 MB.	
Help		<u>≤</u> Back N	lext ≥ Cancel

11 On the Network page, specify 2 as the number of virtual NICs to connect, specify the following values for each NIC, then click **Next**.

NIC	Network	NIC	Connect at Power On
NIC1	VM Public	E1000	Selected
		(or as appropriate)
NIC2	VM Private	E1000	Selected
		(or as appropriate)

For the public IP address, you can use any static public IPv4 address that is available to your company.

In VMware, a private NIC is a virtual NIC connected to virtual switch that is on a private network. You can have as many private NICs as the VMware host can handle. You can use any available private IP address to bond to the private NIC. For IPv4, the private IP addresses are 10.0.0.0 to 10.255.255.255, 172.16.0.0 to 172.31.255.255, and 192.168.0.0 to 192.168.255.255.

IMPORTANT: NCS does not require private NICs or private networks, whether you are using virtual or physical environments.

There are perceived advantages and disadvantages for using private NICs. With private NICs, your NCS inter-node traffic can be kept internal and separate from data access traffic, which keeps it more secure and provides separate bandwidth. However, the separation could create a scenario where NCS traffic moves smoothly while data access traffic is down. Some administrators prefer to deliberately combine NCS and client traffic together to avoid this kind of problem.

Create New Virtual Ma	chine	- • • ×
Network Which network connection	s will be used by the virtual machine?	Virtual Machine Version: 8
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	Create Network Connections How many NICs do you want to connect? 2 Network Adapter NIC 1: VM Puble VM Private If supported by this virtual machine version, more than 4 NICs can be virtual machine is created, via its Edit Settings dialog. Adapter choice can affect both networking performance and migration co the VMware KnowledgeBase for more information on choosing among the supported for various guest operating systems and hosts.	mpatibility. Consult
Help	≤ Back N	lext ≥ Cancel

Figure 3-19 Create New VM: Network

12 On the SCSI Controller page, select the SCSI controller type as LSI Logic SAS (the default for SLES 11 64-bit), then click Next.

The wizard preselects the correct default controller based on the guest operation system you selected on the Guest Operating System page.

Figure 3-20 Create New VM: SCSI Controller

🖉 Create New Virtual Ma	chine	
SCSI Controller Which SCSI controller type	would you like to use?	Virtual Machine Version: 8
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Ready to Complete	SCSI controller BusLogic Parallel (not recommended for this guest OS) LSI Logic Parallel SI Logic SAS VMware Paravirtual	
Help	≤B	ack Next ≥ Cancel

13 On the Select a Disk page, select Create a new virtual disk as the virtual disk type to use for the system device, then click Next.

Figure 3-21 Create New VM: Disk

🖉 Create New Virtual Ma	chine
Select a Disk	Virtual Machine Version: 8
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Create a Disk Advanced Options Ready to Complete	A virtual disk is composed of one or more files on the host file system. Together these files appear as a single hard disk to the guest operating system. Select the type of disk to use. Disk Create a new virtual disk C Use an existing virtual disk Reuse a previously configured virtual disk. C Raw Device Mappings Give your virtual machine direct access to SAN. This option allows you to use existing SAN commands to manage the storage and continue to access it using a datastore. C Do not create disk
Help	≤ Back Next ≥ Cancel

- 14 On the Create a Disk page, specify the following information for the virtual disk, then click Next.
 - Disk Size: Specify the amount of space to use for the system device. For example, 40 GB.
 - Disk Provisioning: Select Thick Provision Lazy Zero.

The specified disk space for the virtual disk is allocated at create time. Any data remaining on the physical device is zeroed out on demand at a later time on first write from the virtual machine.

• Disk Location: Select Store with the virtual machine.

Figure 3-22 Create New VM: Create a Disk

Create New Virtual Ma	ichine
Create a Disk Specify the virtual disk siz	e and provisioning policy Virtual Machine Version: 8
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Create a Disk Create a Disk Advanced Options Ready to Complete	Capacity Disk Size: 40 = GB Oisk Provision I azy Zeroed Thick Provision Eager Zeroed Thick Provision Location Store with the virtual machine Specify a datastore or datastore cluster: Browse
Help	Cancel

- **15** On the Advanced Options page, specify the advanced options to use for the virtual disk, then click **Next**.
 - Virtual Device Node: Select SCSI (0:0) from the drop-down box.
 - Mode: Deselect the Independent check box.

Figure 3-23 Step 15 (Advanced Options)

🕝 Create New Virtual Ma	chine 🕒 💷 🏹
Advanced Options These advanced options d	Virtual Machine Version: 8 o not usually need to be changed.
Configuration Name and Location Storage Virtual Machine Version Guest Operating System CPUs Memory Network SCSI Controller Select a Disk Create a Disk Advanced Options Ready to Complete	Specify the advanced options for this virtual disk. These options do not normally need to be changed. Virtual Device Node © SCSI (0:0) □ IDE (0:0) □ IDE (0:0) □ IDE (0:0) □ Independent Independent disks are not affected by snapshots. □ Persistent Changes are immediately and permanently written to the disk. Changes to this disk are discarded when you power off or revert to the snapshot.
Help	≤ Back Next ≥ Cancel

16 On the Ready to Complete page, review the configuration settings, select Edit the virtual machine settings before completion, then click Continue.

Figure 3-24 Create New VM: Ready to Complete

click Finish to start a task	k that will create the new virtual mach		chine Versio
Configuration	Settings for the new virtual mach	nine:	
<u>Vame and Location</u> Storage	Datastore:	datastore1	
/irtual Machine Version	Guest OS:	SUSE Linux Enterprise 11 (64-bit)	
Suest Operating System	CPUs:	4	
<u>IPUs</u> Aemory	Memory:	4096 MB	
Vetwork	NICs:	2	
SCSI Controller	NIC 1 Network:	VM Public	
<u>Select a Disk</u>	NIC 1 Type:	E1000	
<u>Treate a Disk</u> Advanced Options	NIC 2 Network:	VM Private	
Ready to Complete	NIC 2 Type:	E1000	
	SCSI Controller:	LSI Logic SAS	
	Create disk:	New virtual disk	
	Disk capacity:	40 GB	
	Disk provisioning:	Thick Provision Lazy Zeroed	
	Datastore:	datastore1	
	Virtual Device Node:	SCSI (0:0)	
	Disk mode:	Persistent	
		nine (VM) does not include automatic installation of the gues	t operating
	system. Install a guest OS (on the VM after creating the VM.	

17 On the Hardware tab of the Virtual Machine Properties page, review the hardware properties and edit the VM settings before you complete the virtual machine creation.

The procedures in this step describe how to modify the following settings:

- Add the shared storage.
- Add a CD/ROM device if you are installing from the host CDROM device or from an ISO file.
- Remove unwanted hardware, such as the floppy disk.
- Set the BIOS screen to appear on the next reboot.
- Change the MAC address setting to Manual and use static MAC addresses.
- Add dedicated NICs.

Figure 3-25	Create	New	VM:	VM	Properties
-------------	--------	-----	-----	----	------------

MyVM001 - Virtual Machine	Properties	
Hardware Options Resources		
Show All Devices	Add Remove	Memory Configuration
Hardware		1011 GB Memory Size: 4 🛨 GB 💌
Memory (adding)	Summary 4096 MB	512 GB Maximum recommended for this
CPUs (adding)	4050110	256 GB guest OS: 1011 GB.
Video card (adding)	Video card	128 GB Aximum recommended for best performance: 12276 MB.
WMCI device (adding)	Restricted	64 GB Default recommended for this
🔒 New CD/DVD (adding)	Client Device	guest OS: 1 GB. 32 GB Minimum recommended for this
Antice State (adding)	Client Device	16 GB guest OS: 512 MB.
Sew SCSI Controller (add	LSI Logic SAS	8 GB -
New NIC (adding)	VM Public	4 GB -
 New NIC (adding) New Hard Disk (adding) 	¥M Private Virtual Disk	2 GB -
- HEW Hard Disk (adding)	firtual Disk	1 GB
		512 MB
		256 MB
		128 MB
		64 MB
		32 MB
		16 MB
		8 мв –
		4 MB
Help		Finish Cancel

17a Add the shared storage that you created and mapped in Section 3.7, "Preparing Shared Storage," on page 28.

Repeat the following procedure for each shared hard disk that you want to add to this virtual machine:

17a1 On the Hardware tab, click Add, select Hard Disk as the Device Type, then click Next. You can also select New Hard Disk, then click Add.

Figure 3-26 Add Hardware: Add> Device Type > Hard Disk

🕗 Add Hardware		X
Device Type What sort of device do	you wish to add to your virtual machin	e?
Device Type Select a Disk Create a Disk Advanced Options Ready to Complete	Choose the type of device you w Serial Port Parallel Port Floppy Drive CD/DVD Drive USB Controller USB Device (unavailable) PCI Device (unavailable) Ethernet Adapter Hard Disk SCSI Device	vish to add. Information This device can be added to this Virtual Machine.
Help		_≤Back Next ≥ Cancel

17a2 On the Select a Disk page, select Use an existing virtual disk, then click Next.

Figure 3-27 Add Hardware: Select a Disk

Add Hardware	
Select a Disk	
Device Type Select a Disk Select Existing Disk Advanced Options Ready to Complete	A virtual disk is composed of one or more files on the host file system. Together these files appear as a single hard disk to the guest operating system. Select the type of disk to use. Disk Create a new virtual disk Guese an existing virtual disk Reuse a previously configured virtual disk. Create Mappings Give your virtual machine direct access to SAN. This option allows you to use existing SAN commands to manage the storage and continue to access it using a datastore.
Help	_≤Back Next ≥ Cancel

17a3 On the Select Existing Disk page, click **Browse**. In the pop-up browser, locate the datastore, select the disk you want to add from the datastore, then click **OK**. On the Select Existing Disk page, click **Next**.

As a best practice for consistency, add the SBD disks first, then add the data disks. For the first hard disk you add, select one of the disks you prepared for use as an SBD. For the second hard disk you add, select the second disk that you prepared for the SBD. Thereafter, you can add data disks in your preferred order.

Add Hardware Select Existing Disk Which existing disk do yo	ou want to use as this virtual disk?	X
Device Type Select a Disk Select Existing Disk Advanced Options Ready to Complete	Disk File Path	
Help	≤Back Next ≥	Cancel

Figure 3-28 Add Hardware: Select Existing Disk

Figure 3-29 Add Hardware: Browse Datastores

Look in: sharedDisks			<u> </u>	
Name	File Size	Last Modified		
🚈 VM-SAN-512G	512 GB	11/9/2012 10:21:38 AM		
🚈 VM-SAN-256G	256 GB	1/7/2013 12:03:28 PM		
🚈 VM-SAN-128G	128 GB	1/5/2013 10:15:15 PM		
🟝 VM-SAN-001G	1 GB	1/5/2013 10:14:53 PM		
🚈 VM-SAN-001G	1 GB	1/5/2013 10:14:54 PM		
🚈 VM-SAN-002G	2 GB	1/7/2013 12:03:29 PM		
🚈 VM-SAN-003G	3 GB	11/9/2012 10:21:56 AM		
🟝 VM-SAN-004G-L	4 GB	11/9/2012 10:21:59 AM		
🚈 VM-SAN-005G-L	5 GB	1/5/2013 9:43:59 PM		
🚈 VM-SAN-006G-L	6 GB	1/7/2013 8:53:59 AM		
🟝 VM-SAN-007G-L	7 GB	11/9/2012 10:22:08 AM		
🟝 VM-SAN-008G-L	8 GB	11/9/2012 10:22:10 AM		
🚈 VM-SAN-009G-L	9 GB	11/9/2012 10:22:13 AM		
🚈 VM-SAN-010G-L	10 GB	11/9/2012 10:22:16 AM		
🟝 VM-SAN-011G-L	11 GB	11/9/2012 10:22:19 AM		
🟝 VM-SAN-012G-L	12 GB	11/9/2012 10:22:22 AM		
🚈 VM-SAN-013G-L	13 GB	12/16/2012 7:45:39 AM		
🚈 VM-SAN-014G-L	14 GB	1/4/2013 6:53:12 PM		
🟝 VM-SAN-015G-L	15 GB	11/9/2012 10:22:31 AM		
🚈 VM-SAN-016G-L	16 GB	1/5/2013 10:41:39 PM		
🚈 VM-SAN-017G-L	17 GB	1/5/2013 10:31:24 PM		
				ОК

17a4 On the Advanced Options page, specify the following values, then click Next.

- Virtual Device Node: Select SCSI (1:0) (or the default node value offered as appropriate if you have added multiple disks) from the drop-down box.
- Mode: Select the Independent check box, then select Persistent.

Disks in persistent mode behave like conventional disks on your physical computer. All data written to a disk in persistent mode are written permanently to the disk.

Figure 3-30 Add Hardware: Advanced Options for the Existing Disk

Add Hardware	
Advanced Options These advanced options d	o not usually need to be changed.
Device Type Select a Disk Select Existing Disk Advanced Options Ready to Complete	Specify the advanced options for this virtual disk. These options do not normally need to be changed. Virtual Device Node SCSI (1:0) Independent Independent disks are not affected by snapshots. Persistent Changes are immediately and permanently written to the disk. Changes to this disk are discarded when you power off or revert to the snapshot.
Help	≤ Back Next ≥ Cancel

17a5 On the Ready to Complete page, review the selected options, then click Finish.

Figure 3-31 Add Hardware: Ready to Complete Add Existing Hard Disk

Add Hardware Ready to Complete Review the selected opt	ions and click Finish to add	the hardware.	X
Device Type Select a Disk	Options:		
Select Existing Disk Advanced Options Ready to Complete	Hardware type: Create disk: Virtual Device Node: Disk file path: Disk mode:	Hard Disk Use existing disk SCSI (1:0) [datastore1] sharedDisks/VM-SAN-001G-S8D-A.vmdk Independent-persistent	
Help		≤Back Einish	Cancel

17a6 Repeat the previous steps for each shared hard disk that you want to add.

- **17b** On the Hardware tab of the Virtual Machine Properties page, add a CD/DVD device, then set its properties.
 - Device Status: Select the Connect at power on check box.
 - Device Type: Use one of the following resources:

If you are installing from a DVD, select **Host device**, then select the path of the device from the drop-down list. In the Figure 3-32 example, the path is /vmfs/devices/ cdrom/mpx.vmhba0:C0:T0:L0.

If you are installing from a DVD ISO file, select **Datastore ISO file**, then browse to locate and select the file.

Virtual Device Node: Select the device node from the drop-down list, such as IDE (1:0).

MyVM001 - Virtual Machine	Properties	
Hardware Options Resources		
Show All Devices	Add Remove	Connected
Hardware	Summary	Connect at power on
 Memory (adding) CPUs (adding) Video card (adding) VMCI device (adding) VMCI device (adding) New CD/DVD (adding) New Floppy (adding) New SCSI Controller (add New NIC (adding) New Hard Disk (adding) New Hard Disk (adding) New Hard Disk (adding) 	4096 MB 4 Video card Restricted /vmfs/devices/cdr Client Device LSI Logic SAS VM Public VM Private Virtual Disk LSI Logic SAS Mapped Raw LUN	Device Type C Client Device Note: To connect this device, you must power on the virtual machine and then click the Connect CD/DVD button in the toolbar. Image: Host Device /vmfs/devices/cdrom/mpx.vmhba0:C0:T0:L0 Image: Device /vmfs/devices/cdrom/mpx.vmhba0:C0:T0:L0 Image: Device /vmfs/devices/cdrom/mpx.vmhba0:C0:T0:L0 Image: Device TSO File Image: Device TSO File Image: Device TSO File Image: Device To the toolbar Image: Device Toolbar
Help		FinishCancel

Figure 3-32 Create New VM: CD/DVD Disk Properties

17c On the Hardware tab of the Virtual Machine Properties page, remove unwanted hardware, such as the floppy disk. Select the object, then click **Remove**.

17d On the Options tab of the Virtual Machine Properties page, review the settings. If you need to set the BIOS for the virtual machine, select the Force BIOS Setup check box.

The next time the virtual machine boots, it is forced into the BIOS setup screen.

Figure 3-33 Create New VM: Options > Boot Options

MyVM001 - Virtual Machine Properties	
Hardware Options Resources	
Settings Summary General Options MyVM001 VMware Tools System Default Power Management Suspend Advanced General General Normal CPUID Mask Expose Nx flag to Memory/CPU Hotplug Disabled/Disabled Boot Options Boot to BIOS Fibre Channel NPIV None CPU/MMU Virtualization Automatic Swapfile Location Use default settings	Firmware Specify the boot firmware:
Help	Finish Cancel

17e On the Hardware tab of the Virtual Machine Properties page, select the VM Private NIC, change the MAC Address setting to Manual, then type the static MAC address.

Figure 3-34 Create New VM: Hardware > NIC > Manual MAC Address

🖉 V	4 - Virtual Machine Proper	ties	
Hard	ware Options Resources		
Π	Show All Devices	Add Remove	Connected
Hare	dware	Summary	Connect at power on
	Memory (adding)	1024 MB	Adapter Type
	CPUs (adding)	1	Current adapter: E1000
💻	Video card (adding)	Video card	
	VMCI device (adding)	Restricted	MAC Address
2	New CD/DVD (adding)	Client Device	00:50:56:00:00:01
	New Floppy (adding)	Client Device	C Automatic
🎯	New SCSI Controller (add	LSI Logic Parallel	DirectPath I/O
	New NIC (adding)	¥M Private	Status:
	New Hard Disk (adding)	¥irtual Disk	Status:
			Network Connection
			Network label:
			VM Private
	Help		Finish Cancel

- 17f On the Hardware tab of the Virtual Machine Properties page, add dedicated NICs.
 - **17f1** On the Hardware tab, click Add.
 - 17f2 On the Add Hardware page, click PCI Device.

Figure 3-35 Add Hardware: Choose PCI Device

Choose PCI Device Which of the present PCI/	PCIe devices would you like to add?
Device Type Select PCI/PCIe Device Ready to Complete	Connection Specify the physical PCI/PCIe Device to connect to: 04:00.0 Broadcom Corporation Broadcom NetXtreme II BCM5709 1000Base
	Note: The presence of a PCI/PCIe device passthrough will prevent the use of many commands on the virtual machine. It will not be able to be suspended, to have snapshots taken or restored, or to participate in vMotion.
	Adding a PCI Passthrough device to this VM will automatically set its minimum memory reservation equal to its memory size.

17f3 On the Chose PCI Device page, specify the physical NIC to use for the NIC.

17f4 Click Next.

17g Click Finish.

18 In the vSphere client, select Host > Virtual Machines, then verify that the newly created virtual machine appears in the VM list of the vSphere client.

Figure 3-36 VM List in the VSphere Client

🧭 151.155.189.142 - vSphr	re Client						- 0 ×
Elle Edit View Igvente	ary Administration Plug-in	ъ <u>H</u> elp					
0 0 None 2 d	Inventory > 📑 Inventory						
CG-02 CG	CC-ESC-02.ncslab.prova Getting Randol Summery Name () CC-03 () CC-02 () MyVH001				Hist CPU - M 2109 1922 0	8 Graper Poerta Persona Name, State or Guest OS Host Host Hem - Hit 1518 1521 0	
	(*C			n			
Recent Tasks						Name, Target or Status con	Kaina: • Clear 3
Führen	Target		Status	Details	Initiated by	Requested Start Time	** Sart Time
2 Create virtual machine		.155.109,142	Consisted		root	1/7/2013 4:12:00 PM	1/7/2013 4:12:00 PM
•		16			_		
Taska 🗧						1	License Period 257 days remaining ison

19 (Optional) View a list of the files created for the virtual machine. In a terminal console, go to the location that you specified for the virtual machine, then enter

ls -l

For example:

#1 root@CG-E	SXi-02:/vm	nfs/volumes	s/509d3948-7ed5	3294-d()b3-984]	be1751d14/CG-02 # ls -1
-rw	1 root	root	0	Nov 27	21:54	CG-02-8ddbb415.vswp
-rw	1 root	root	42949672960	Nov 27	22:37	CG-02-flat.vmdk
-rw-rr	1 root	root	8684	Nov 27	22:34	CG-02.nvram
-rw	1 root	root	466	Nov 27	21:55	CG-02.vmdk
-rw-rr	1 root	root	0	Nov 9	9 19:21	CG-02.vmsd
-rw-rr	1 root	root	6862	Nov 27	21:54	CG-02.vmx
-rw	1 root	root	0	Nov 9	9 19:21	CG-02.vmx.lck
-rw-rr	1 root	root	256	Nov 9	9 19:21	CG-02.vmxf
-rw-rr	1 root	root	6862	Nov 27	21:54	CG-02.vmx~
-rw-rr	1 root	root	2662757	Nov 27	22:04	vmware.log
-rw	1 root	root	8566144	Nov 9	9 19:21	vmx-CG-02-2379985941-1.vswp

3.9 Guest Operating System Installation Sources

You can install OES as a guest operating system on the virtual machine by using one of the following sources:

CD/DVD device

When you use the host's physical CD/DVD device, only one VM can access the device at a time.

- ISO image as CD/DVD device
- Network repository / AutoYaST
- USB
- PXE Boot

A

Documentation Updates

This section contains information about documentation content changes made to the *Novell Cluster Services Implementation Guide for VMware* since the initial 2.0 release for Novell Open Enterprise Server 11.

This document was updated on the following dates:

- Section A.1, "March 2015 (OES 11 SP2)," on page 57
- Section A.2, "January 2014 (OES 11 SP2)," on page 57

A.1 March 2015 (OES 11 SP2)

Updated Section 3.5, "Setting Up Dedicated NICs for a Virtual Machine," on page 26 with procedural instructions.

A.2 January 2014 (OES 11 SP2)

Modified eDirectory links to point to the NetIQ eDirectory 8.8 website (http://www.netiq.com/ documentation/edir88).

Updates were made to the following sections. The changes are explained below.

- Section A.2.1, "Implementing Novell Cluster Services in an ESXi Virtualized Environment," on page 57
- Section A.2.2, "Planning for the Virtualized Environment," on page 58

A.2.1 Implementing Novell Cluster Services in an ESXi Virtualized Environment

Location	Change
Section 3.6, "Setting Up a Time Server for a Virtual Machine," on page 27	This section is new.

Location	Change			
Section 3.8, "Creating a Virtual Machine," on page 30	iSCSI controller			
	NOTE: VMware Paravirtual SCSI controllers cannot be used in clustering environments because they use caches to achieve better throughput.			
	NIC types			
	You can specify whatever NIC type you need based on your hardware, network needs, and other considerations for your environment.			
	For example, E1000 and VMXNET3 NIC types have drivers in the Linux kernel and do not require VMware Tools to be installed in order to run. This allows these NICs to be available during the operating system installation.			

A.2.2 Planning for the Virtualized Environment

Location	Change
Section 2.6, "Upgrading VMware ESXi on the Host Server," on page 19	This section is new.
Section 2.7, "Installing or Updating VMware Tools on Cluster Nodes," on page 20	Stop Novell Cluster Services on a clustered guest server before you install or update VMware tools.